

## WAGAN Corp. Limited Warranty Registration Form

All WAGAN Corporation products are warranted to the original purchaser of this product.  
**Warranty Duration:** This product is warranted to the original purchaser for a period of one (1) Year from the original purchase date, to be free of defects in material and workmanship. WAGAN Corporation disclaims any liability for consequential damages. In no event will WAGAN Corporation be responsible for any amount of damages beyond the amount paid for the product at retail. In the even of a defective item, please ship the item, prepaid, with a complete explanation of the problem, your name, address and daytime phone number. WAGAN Corporation will, at its option, replaces or repair the defective part. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in the USA and does not extend to any units which have been used in violation of written instructions furnished.  
**Warranty Disclaimers:** This warranty is in-lieu of all warranties expressed or implied and no representative or person is authorized to assume any other liability in connection with the sale of our products. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to negligence, gross negligence, strict liability, breach of warranty and breach of contract.  
**Warranty Performance:** During the above one (1) Year warranty period, a product with a defect will be replaced with a comparable model when the product is returned to WAGAN Corporation with an original store receipt. The replacement product will be in warranty for the balance of the one (1) Year warranty period.

- Please activate my limited warranty for WAGAN Corp. 6 Liter Personal Fridge / Warmer
- Enclosed copy of original sales receipt.

Name		
Mail Address		
City		
State, Zip Code		
Item Purchased	6 Liter Personal Fridge / Warmer	
Stores Name		
Date of Purchase		
Signature		Date

All WAGAN Corporation Products must be registered within (30) days of purchased to activate this warranty. Mail the complete registration form, along with a copy of the original receipt to:

Attn: Customer Service  
 WAGAN Corporation  
 3589 Yale Way  
 Fremont, CA 94538

© 2004 WAGAN Corp.



Item no. 2260

# 6 Liter Personal Fridge/Warmer™



***User's Manual***

## 6 Liter Personal Fridge / Warmer by Wagan Tech

USER'S MANUAL — Please read before using this equipment.

Thank you for purchasing the 6 Liter Personal Fridge / Warmer by Wagan Tech. With normal care and proper treatment it will provide years of reliable service. Please read all operating instructions carefully before use.

### OPERATION:

- 1) Open the door of the cable compartment and pull out the power cord
- 2) Make sure the Cool/Warm selector switch is in the OFF position
- 3) Start the car engine
- 4) Plug the power cord into the 12V cigarette lighter outlet firmly
- 5) Select whether the heating function or the cooling function is going to be used
- 6) The LED indicator light - Red light for warming and Green light for cooling
- 7) Place items inside the storage container and close the fridge cover
- 8) It is recommended that you use a temperature insulation (included) to slow down the cool / warm air spread out when you open the fridge cover

### USE AS A FRIDGE:

It will take about 30 minutes to reach the maximum cooling temperature of approx: 24.8°F (-4°C).

Items placed in the fridge should be pre-chilled to assist the fridge to reach the lowest temperature as quickly as possible. The fridge will continue to operate as long as power is supplied. Contents inside the fridge will stay cool for some time after the power is turned off. However, the temperature will rise to that of the surrounding air over time. Exercise normal cautions that you would for any food in a

cooling device. This product is not designed for storing open containers of liquid.

### USE AS A WARMER:

It will take about 60 minutes to reach the maximum warming temperature of approx: 140°F (60°C).

It is recommended that items placed in the warmer be pre-heated to assist the warmer reaching the maximum temperature as quickly as possible. The warmer will continue to operate as long as power is supplied. A built-in thermostat will cycle the unit on and off to prevent overheating. Contents inside the warmer will stay warm for some time after the power is disconnected or turned off. However, the temperature will drop to that of the surrounding air over time.

### CLEANING AND MAINTENANCE:

To clean the unit, switch it off and unplug from its power source and allow it to cool. Wipe the inside with a clean, damp cloth. Use a mild soap with water if necessary. Do not use abrasive cleaners or scrubbers as this may damage the finish. Do not immerse the unit in water. Do not use household chemicals to clean the unit e.g. Bleach, white spirit etc.....

### PRODUCT SPECIFICATIONS:

Name	Description
Capacity	6 liters (9 cans)
Cooling capacity	45°F - 50°F below room temperature
Minimum temperature	24.8°F (-4°C)
Maximum temperature	140°F (60°C)
Input power	3.3 Amps, DC 12V
Power consumption	40 Watt
Brushless motor	20,000 hr
Insulation material	Polyurethane foam

2

## 6 Liter Personal Fridge / Warmer by Wagan Tech

USER'S MANUAL — Please read before using this equipment.

### DISPOSAL AND THE ENVIRONMENT:

If your fridge requires replacement or is of no further use, please think of protecting the environment. Contact your local authority for advice as many have facilities for environmentally safe disposal.

### CAUTIONS:

- 1) Children cannot sense the dangers caused by improper handling of electrical devices. Therefore, Do Not let children use this fridge / warmer, except under supervision
- 2) Do not carry the fridge / warmer by the cable or pull the cable to remove the plug from the socket. Protect the cable from heat, oil, solvents, sharp objects, or anything that could damage the insulation
- 3) Inspect the fridge / warmer cable and any extension leads used periodically for excessive wear or damage
- 4) Operate unit only with cord provided. Store cord inside unit to prevent misplacing
- 5) Do not hold the plug with wet or moist hands
- 6) Unplug the unit before starting the engine of your vehicle, then re-plug after vehicle engine is started as the voltage surge could damage the unit
- 7) Switch off the fridge / warmer and wait for 30 minutes before switching again from cool to hot or Vice Versa
- 8) Do not use the fridge / warmer in badly ventilated place. Excessive heat will be discharged and fresh air brought in. Good ventilation is essential to avoid over-heating. The

inside fuse may be damaged and lose its power if used in badly ventilated place. Do not block the vent

- 9) Do not place the unit in a sealed car or in a truck. Never obstruct the air current. Never use the fridge / warmer in closed rooms without supply of fresh air
- 10) Remove all the tar and rust
- 11) Use an extended cord if it is too short (Available at car accessories shops)
- 12) Do not put any sticks into the fan during operation. Avoid using the unit on grassland since grass will easily go into the fan
- 13) Pay special attention to the batteries when using. Pull off the plug from the power source after use. Power source may still run depending on the over-heating of the batteries
- 14) Do not immerse the unit and the 12V adapter in water
- 15) Do not put ice or icepack in the fridge
- 16) The fridge / warmer is suitable for camping use, but not supposed to be exposed to rain
- 17) In the heating mode, metal parts inside the unit become very hot. Do not touch those metal parts if the unit is being / was operated in the heating mode